

Work Order ID 132407

May-07-15 2:40:31 PM

132407

Page 1

Item ID: D350-607-511

Accept

N900040100Setup Start ***NS1***

Revision ID:

Item Name: Quick Release Basket and Long Cargo Tube Mounting Provisions, Fits LH or RH

Stop ***NS2***

Start Date: 5/01/15 Start Qty: 2.00

2

Cust Item ID:

Required Date: 5/07/15 Req'd Qty: 2.00

2

Customer:

Reference:

Approvals: Process Plan: ML5 Date: MAY 11 2015

Tooling:

Date:

Run Start ***NR1***

QC:

Date:

SPC (Y/N):

Date:

Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	---------	--------	--------------	---------------	---------------	------------------	----------------

Draw Nbr	Revision Nbr
----------	--------------

D350-607-4

C

DSI9699

A

DAS
27
9-89

ML5

1506-14

(2)

100

Document Control

0.00

DAS
38
9-89DAS
02
9-89***100***

DC

Memo

0.00

Doc.Control -USB or Paperwork

Photocopy bluefile & type labels per PPP D350-607-511 CHG006

15-06-15

140

Pick Kit

0.00

140

Packaging

Memo

0.00

Packaging

2X

DAS
27
9-89DAS
6
9-89

JUN 11 2015

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS <table style="width: 100%; border: none;"> <tr> <td style="width: 15%;">Skid-tube ☐</td> <td style="width: 15%;">Cross tube ☐</td> <td style="width: 15%;">Water Jet ☐</td> <td style="width: 15%;">Engineering ☐</td> </tr> <tr> <td>Machining ☐</td> <td>Small Fab ☐</td> <td>Prod. Eng. Coord. ☐</td> <td>Quality ☐</td> </tr> <tr> <td>Thermoforming ☐</td> <td>Finishing ☐</td> <td>Rec/Store/Packaging ☐</td> <td>Other ☐</td> </tr> <tr> <td>Large Fab ☐</td> <td>Composite ☐</td> <td>Supplier ☐</td> <td></td> </tr> </table>						Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐																						
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐																						
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐																						
Large Fab ☐	Composite ☐	Supplier ☐																							
Date :		Step #:		QTY Effective :				MRB (QSI042) Approval																	
Description Work Order Deviation				Disposition				Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval																	
Root Cause		FAULT CATEGORY																							
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐	Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐														
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐	Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐														
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐	Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐														
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐	Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐														
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐	Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐														
Past Expiry Date ☐	Manufacturing Process ☐	OTHER : _____																							
Misidentified ☐	Past Due ☐																								

Picklist Print

May-07-15 2:40:29 PM

Page 1

Work Order ID: 132407

132407

Parent Item: D350-607-511

D350-607-511

Parent Item Name: Quick Release Basket and Long Cargo Tube Mounting Provisions, Fits LH or RH

Start Date: 5/01/15

Required Date: 5/07/15

Start Qty: 2.00

Required Qty: 2.00

Comments: IPP REV:A NEW ISSUE 10-06-28 JLM VERIFIED BY: LL IPP
REV:B 13.12.30 PER RE.C ECN13-672 DD VERF:RQ IPP REV:C
14.06.09 AS PER ECN14-572 DD VERF:JLM

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
D3910-7 *D3910-7* Crosstube Lug DAS 02 9-89		Manufactured	No				Each	23.0000		2	DAS 27 9-89		
				<u>Location</u>				<u>Loc Qty</u>					
				ST525				23					
				120673				3					
				<u>129734</u>				20		2			
D3501-1 *D3501-1* Bushing DAS 02 9-89		Manufactured	No			140	Each	325.0000	8	16			
				<u>Location</u>				<u>Loc Qty</u>					
				ST046				204				DAS 27 9-89	
				125925				1		16			
				<u>130742</u>				203					
				ST051A				121					
				131169				121					
D3910-3 *D3910-3* X-Tube Lug DAS 02 9-89		Manufactured	No			140	Each	81.0000	2	4			
				<u>Location</u>				<u>Loc Qty</u>					
				ST524				6				DAS 27 9-89	
				110324				6					
				ST525A				75		4			
				<u>117781</u>				75					

JUN 11 2015

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS <table style="width:100%; border: none;"> <tr> <td style="border: none;">Skid-tube ☐</td> <td style="border: none;">Cross tube ☐</td> <td style="border: none;">Water Jet ☐</td> <td style="border: none;">Engineering ☐</td> </tr> <tr> <td style="border: none;">Machining ☐</td> <td style="border: none;">Small Fab ☐</td> <td style="border: none;">Prod. Eng. Coord. ☐</td> <td style="border: none;">Quality ☐</td> </tr> <tr> <td style="border: none;">Thermoforming ☐</td> <td style="border: none;">Finishing ☐</td> <td style="border: none;">Rec/Store/Packaging ☐</td> <td style="border: none;">Other ☐</td> </tr> <tr> <td style="border: none;">Large Fab ☐</td> <td style="border: none;">Composite ☐</td> <td style="border: none;">Supplier ☐</td> <td></td> </tr> </table>						Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐																																															
Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐																																																																				
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐																																																																				
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐																																																																				
Large Fab ☐	Composite ☐	Supplier ☐																																																																					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval																																																																
Description Work Order Deviation				Disposition			Completed By																																																																
							Lead hand / Supervisor Approval Verification																																																																
							QC / QA Coordinator Approval																																																																
Root Cause <table style="width:100%; border: none;"> <tr> <td style="border: none;">Environment ☐</td> <td style="border: none;">No Re-verification ☐</td> </tr> <tr> <td style="border: none;">Design ☐</td> <td style="border: none;">Operator ☐</td> </tr> <tr> <td style="border: none;">Doc/Data ☐</td> <td style="border: none;">Offset/Setup ☐</td> </tr> <tr> <td style="border: none;">Equip/Tooling ☐</td> <td style="border: none;">Supplier ☐</td> </tr> <tr> <td style="border: none;">Handling/Pre ☐</td> <td style="border: none;">Training ☐</td> </tr> <tr> <td style="border: none;">Material ☐</td> <td style="border: none;">Use for Testing ☐</td> </tr> <tr> <td style="border: none;">Internal Transport ☐</td> <td style="border: none;">Poor Information ☐</td> </tr> <tr> <td style="border: none;">Tribal Knowledge ☐</td> <td style="border: none;">Rushing ☐</td> </tr> <tr> <td style="border: none;">LOA ☐</td> <td style="border: none;">Product Improvement ☐</td> </tr> <tr> <td style="border: none;">Substation ☐</td> <td style="border: none;">Process Improvement ☐</td> </tr> <tr> <td style="border: none;">Past Expiry Date ☐</td> <td style="border: none;">Manufacturing Process ☐</td> </tr> <tr> <td style="border: none;">Misidentified ☐</td> <td style="border: none;">Past Due ☐</td> </tr> </table>		Environment ☐	No Re-verification ☐	Design ☐	Operator ☐	Doc/Data ☐	Offset/Setup ☐	Equip/Tooling ☐	Supplier ☐	Handling/Pre ☐	Training ☐	Material ☐	Use for Testing ☐	Internal Transport ☐	Poor Information ☐	Tribal Knowledge ☐	Rushing ☐	LOA ☐	Product Improvement ☐	Substation ☐	Process Improvement ☐	Past Expiry Date ☐	Manufacturing Process ☐	Misidentified ☐	Past Due ☐	FAULT CATEGORY <table style="width:100%; border: none;"> <tr> <td style="border: none;">Pressure/Forced ☐</td> <td style="border: none;">Temperature/Cure ☐</td> <td style="border: none;">Power Loss/Surge ☐</td> <td style="border: none;">Positioned Wrong ☐</td> </tr> <tr> <td style="border: none;">Bending ☐</td> <td style="border: none;">Set-up ☐</td> <td style="border: none;">Folio/Program ☐</td> <td style="border: none;">Outside Dimensions ☐</td> </tr> <tr> <td style="border: none;">Centre Not Concentric ☐</td> <td style="border: none;">BOM/Route ☐</td> <td style="border: none;">Grain ☐</td> <td style="border: none;">Over/Under tolerance ☐</td> </tr> <tr> <td style="border: none;">Cracks ☐</td> <td style="border: none;">Broken/Damage/Defect ☐</td> <td style="border: none;">Weld ☐</td> <td style="border: none;">Part Incorrect ☐</td> </tr> <tr> <td style="border: none;">Crimp/Kink/Ripple/Wave ☐</td> <td style="border: none;">Inspection Incomplete/Unqualified ☐</td> <td style="border: none;">Wrong Stock Pulled ☐</td> <td style="border: none;">Part Lost/Missing ☐</td> </tr> <tr> <td style="border: none;">Cuffs ☐</td> <td style="border: none;">Contamination ☐</td> <td style="border: none;">Out of Sequence ☐</td> <td style="border: none;">Part Moved ☐</td> </tr> <tr> <td style="border: none;">Crushing ☐</td> <td style="border: none;">Countersink ☐</td> <td style="border: none;">Off-set ☐</td> <td style="border: none;">Drawing ☐</td> </tr> <tr> <td style="border: none;">Heat Treat ☐</td> <td style="border: none;">Cut Too Short ☐</td> <td style="border: none;">Mislabeled ☐</td> <td style="border: none;">Finish ☐</td> </tr> <tr> <td style="border: none;">Wave/Twist in Tube ☐</td> <td style="border: none;">Instructions Incomplete/Unclear ☐</td> <td style="border: none;">Fit/Function ☐</td> <td style="border: none;">Misread ☐</td> </tr> <tr> <td style="border: none;">Marks/Chatter ☐</td> <td style="border: none;">Drill Holes ☐</td> <td style="border: none;">Misaligned/off center ☐</td> <td style="border: none;">Turning Sequence ☐</td> </tr> </table>						Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐
Environment ☐	No Re-verification ☐																																																																						
Design ☐	Operator ☐																																																																						
Doc/Data ☐	Offset/Setup ☐																																																																						
Equip/Tooling ☐	Supplier ☐																																																																						
Handling/Pre ☐	Training ☐																																																																						
Material ☐	Use for Testing ☐																																																																						
Internal Transport ☐	Poor Information ☐																																																																						
Tribal Knowledge ☐	Rushing ☐																																																																						
LOA ☐	Product Improvement ☐																																																																						
Substation ☐	Process Improvement ☐																																																																						
Past Expiry Date ☐	Manufacturing Process ☐																																																																						
Misidentified ☐	Past Due ☐																																																																						
Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐																																																																				
Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐																																																																				
Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐																																																																				
Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐																																																																				
Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐																																																																				
Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐																																																																				
Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐																																																																				
Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐																																																																				
Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐																																																																				
Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐																																																																				
OTHER :																																																																							

Picklist Print

May-07-15 2:40:29 PM

Page 2

Work Order ID: 132407

132407

Parent Item: D350-607-511

D350-607-511

Parent Item Name: Quick Release Basket and Long Cargo Tube Mounting Provisions, Fits LH or RH

Start Date: 5/01/15

Required Date: 5/07/15

Start Qty: 2.00

Required Qty: 2.00

D3910-5 Manufactured No 140 Each 11.0000 1 2

D3910-5

Crosstube Lug

DAS
02
9-89

Location

Loc Qty

Loc Code

ST525

11

117637

11

D3984

Manufactured No

140

f

14.0000

2

4

D3984

Rubber Extrusion, X-Tube, Per Foot

DA:
02
9-89

Location

Loc Qty

Loc Code

ST413

14

115196

14

D4148-041

Manufactured No

140

Each

4.0000

1

2

D4148-041

Fwd Crosstube Lug Assembly

DAS
02
9-89

Location

Loc Qty

Loc Code

ST539

4

129951

2

129952

1

131058

1

D4149-041

Manufactured No

140

Each

5.0000

1

2

D4149-041

Aft X-Tube Lug Ass'y

DAS
02
9-89

Location

Loc Qty

Loc Code

ST539

5

129962

3

131065

2

May-07-15 2:40:30 PM

Shop Packet Print

Page 2

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval		
Description Work Order Deviation				Disposition			Completed By		
Root Cause		FAULT CATEGORY							
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐				
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐				
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐				
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐				
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐				
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐				
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐				
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐				
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐				
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐				
Past Expiry Date ☐	Manufacturing Process ☐	OTHER : _____							
Misidentified ☐	Past Due ☐								

Picklist Print

May-07-15 2:40:30 PM

Page 3

Work Order ID: 132407

132407

Parent Item: D350-607-511

D350-607-511

Parent Item Name: Quick Release Basket and Long Cargo Tube Mounting Provisions, Fits LH or RH

Start Date: 5/01/15

Required Date: 5/07/15

Start Qty: 2.00

Required Qty: 2.00

D4775-041

Manufactured No

140

Each

12.0000

2

4

D4775-041

Strut Assembly

DAS
02
9-89

Location

Loc Qty

Loc Code

ST514

12

127656

1

128501

2

130019

8

131101

1

**

DAS
27
9-89



D4776-3

Manufactured No

140

Each

20.0000

2

4

D4776-3

Skidtube Clevis

DAS
02
9-89

Location

Loc Qty

Loc Code

ST127

20

128437

5

130939

10

131799

5

**

DAS
27
9-89



AN4-14A

Purchased No

140

Each

228.0000

20

40

AN4-14A

Bolt

DAS
02
9-89

Location

Loc Qty

Loc Code

FG

5

122141

5

ST325A

107

131677

2

M131153

5

M132189

100

ST344

116

M130716

15

M131803

101

**

DAS
27
JUN 1 2015



May-07-15 2:40:30 PM

Shop Packet Print

Page 3

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS <table style="width:100%; border: none;"> <tr> <td style="border: none;">Skid-tube ☐</td> <td style="border: none;">Cross tube ☐</td> <td style="border: none;">Water Jet ☐</td> <td style="border: none;">Engineering ☐</td> </tr> <tr> <td style="border: none;">Machining ☐</td> <td style="border: none;">Small Fab ☐</td> <td style="border: none;">Prod. Eng. Coord. ☐</td> <td style="border: none;">Quality ☐</td> </tr> <tr> <td style="border: none;">Thermoforming ☐</td> <td style="border: none;">Finishing ☐</td> <td style="border: none;">Rec/Store/Packaging ☐</td> <td style="border: none;">Other ☐</td> </tr> <tr> <td style="border: none;">Large Fab ☐</td> <td style="border: none;">Composite ☐</td> <td style="border: none;">Supplier ☐</td> <td></td> </tr> </table>						Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐																						
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐																						
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐																						
Large Fab ☐	Composite ☐	Supplier ☐																							
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval																		
Description Work Order Deviation				Disposition				Completed By																	
Root Cause				FAULT CATEGORY																					
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐																				
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐																				
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐																				
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐																				
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐																				
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐																				
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐																				
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐																				
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐																				
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐																				
Past Expiry Date ☐	Manufacturing Process ☐	OTHER : _____																							
Misidentified ☐	Past Due ☐																								

Picklist Print

May-07-15 2:40:30 PM

Page 4

Work Order ID: 132407

132407

Parent Item: D350-607-511

D350-607-511

Parent Item Name: Quick Release Basket and Long Cargo Tube Mounting Provisions, Fits LH or RH

Start Date: 5/01/15

Required Date: 5/07/15

Start Qty: 2.00

Required Qty: 2.00

AN4-42A

Purchased No

140 Each

44.0000 4 8

AN4-42A

Bolt

DAS
02
9-89

Location

Loc Qty

Loc Code

ST312A

44

M131320

44

AN6-13A

Purchased No

140 Each

30.0000 2 4

AN6-13A

BOLT

DAS
02
9-89

Location

Loc Qty

Loc Code

ST334

30

m131305

30

MS21042L4

Purchased No

140 Each

2,297.000 24 48

MS21042L4

Locknut

DAS
02
9-89

Location

Loc Qty

Loc Code

FP001

42

m124231

42

GA

224

m127813

224

ST260a

62

m130799

56

m131803

6

ST305

1969

m128300

8

m130388

16

m130922

97

m131618

12

m132123

1836

DAS
27
9-89

DAS
27
9-89

DAS
27
JUN 1 2015

May-07-15 2:40:30 PM

Shop Packet Print

Page 4

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS Skid-tube ☐ Machining ☐ Thermoforming ☐ Large Fab ☐ Cross tube ☐ Small Fab ☐ Finishing ☐ Composite ☐ Water Jet ☐ Prod. Eng. Coord. ☐ Rec/Store/Packaging ☐ Supplier ☐ Engineering ☐ Quality ☐ Other ☐					
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval		
Description Work Order Deviation				Disposition				Completed By Lead hand / Supervisor Approval Verification QC / QA Coordinator Approval	
Root Cause		FAULT CATEGORY							
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐				
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐				
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐				
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐				
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐				
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐				
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐				
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐				
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐				
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐				
Past Expiry Date ☐	Manufacturing Process ☐								
Misidentified ☐	Past Due ☐	OTHER : _____							

Picklist Print

May-07-15 2:40:30 PM

Page 5

Work Order ID: 132407

132407

Parent Item: D350-607-511

D350-607-511

Parent Item Name: Quick Release Basket and Long Cargo Tube Mounting Provisions, Fits LH or RH

Start Date: 5/01/15

Required Date: 5/07/15

Start Qty: 2.00

Required Qty: 2.00

MS21042L6

Purchased

No

140

Each

340.0000

2

4

MS21042L6

Nut

DAS
02
9-89

Location

Loc Qty

Loc Code

ST273A

200

m131624

200

ST305

1

m129909

1

t260a

139

m131317

139

**

DAS
27
9-89

DAS
6
9-89

NAS1149F0432P

Purchased

No

140

Each

1,092.000

40

80

NAS1149F0432P

WASHER

DAS
02
9-89

Location

Loc Qty

Loc Code

ST260a

1000

M131697

1000

st268

92

M128995

63

M130388

16

M131340

13

**

DAS
27
9-89

DAS
3
9-89

NAS1149F0663P

Purchased

No

140

Each

133.0000

4

8

NAS1149F0663P

WASHER

DAS
02
9-89

Location

Loc Qty

Loc Code

st268

133

M128591

2

M131317

131

**

DAS
27
9-89

DAS
6
9-89

JUN 11 2015

May-07-15 2:40:31 PM

Shop Packet Print

Page 5

DQA: _____ Date: _____



WORK ORDER NON-CONFORMANCE / UPDATE

QA Closed: _____ Date: _____

Work Order update only ☐

Work Order: _____ Part No. _____ NCR No. _____		DISPOSITION Rework ☐ Scrap ☐ Use-as-is ☐ Suspected Unapproved ☐		AGAINST DEPARTMENT/PROCESS <table style="width: 100%; border: none;"> <tr> <td style="border: none;">Skid-tube ☐</td> <td style="border: none;">Cross tube ☐</td> <td style="border: none;">Water Jet ☐</td> <td style="border: none;">Engineering ☐</td> </tr> <tr> <td style="border: none;">Machining ☐</td> <td style="border: none;">Small Fab ☐</td> <td style="border: none;">Prod. Eng. Coord. ☐</td> <td style="border: none;">Quality ☐</td> </tr> <tr> <td style="border: none;">Thermoforming ☐</td> <td style="border: none;">Finishing ☐</td> <td style="border: none;">Rec/Store/Packaging ☐</td> <td style="border: none;">Other ☐</td> </tr> <tr> <td style="border: none;">Large Fab ☐</td> <td style="border: none;">Composite ☐</td> <td style="border: none;">Supplier ☐</td> <td></td> </tr> </table>						Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐	Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐	Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐	Large Fab ☐	Composite ☐	Supplier ☐	
Skid-tube ☐	Cross tube ☐	Water Jet ☐	Engineering ☐																						
Machining ☐	Small Fab ☐	Prod. Eng. Coord. ☐	Quality ☐																						
Thermoforming ☐	Finishing ☐	Rec/Store/Packaging ☐	Other ☐																						
Large Fab ☐	Composite ☐	Supplier ☐																							
Date :		Step #:		QTY Effective :			MRB (QSI042) Approval																		
Description Work Order Deviation				Disposition			Completed By																		
Root Cause		FAULT CATEGORY																							
Environment ☐	No Re-verification ☐	Pressure/Forced ☐	Temperature/Cure ☐	Power Loss/Surge ☐	Positioned Wrong ☐																				
Design ☐	Operator ☐	Bending ☐	Set-up ☐	Folio/Program ☐	Outside Dimensions ☐																				
Doc/Data ☐	Offset/Setup ☐	Centre Not Concentric ☐	BOM/Route ☐	Grain ☐	Over/Under tolerance ☐																				
Equip/Tooling ☐	Supplier ☐	Cracks ☐	Broken/Damage/Defect ☐	Weld ☐	Part Incorrect ☐																				
Handling/Pre ☐	Training ☐	Crimp/Kink/Ripple/Wave ☐	Inspection Incomplete/Unqualified ☐	Wrong Stock Pulled ☐	Part Lost/Missing ☐																				
Material ☐	Use for Testing ☐	Cuffs ☐	Contamination ☐	Out of Sequence ☐	Part Moved ☐																				
Internal Transport ☐	Poor Information ☐	Crushing ☐	Countersink ☐	Off-set ☐	Drawing ☐																				
Tribal Knowledge ☐	Rushing ☐	Heat Treat ☐	Cut Too Short ☐	Mislabeled ☐	Finish ☐																				
LOA ☐	Product Improvement ☐	Wave/Twist in Tube ☐	Instructions Incomplete/Unclear ☐	Fit/Function ☐	Misread ☐																				
Substation ☐	Process Improvement ☐	Marks/Chatter ☐	Drill Holes ☐	Misaligned/off center ☐	Turning Sequence ☐																				
Past Expiry Date ☐	Manufacturing Process ☐	OTHER : _____																							
Misidentified ☐	Past Due ☐																								

DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS D350-607-3 Rev.D,
INSTALLATION INSTRUCTIONS D350-607-4 Rev. C AND
INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-607 REV. 6
REF TCCA STC: SH94-14
REF FAA STC: SR00213NY
REF EASA STC: EASA.10016996
REF BRAZILIAN STC: 2007S03-03/04/05/06

SHOP COPY
 RETURN TO
 ENGINEERING
 UNCONTROLLED COPY
 SUBJECT TO AMENDMENT
 WITHOUT NOTICE
 WORK ORDER
 NO. 132409 M.C.S
 1505-11

1.0 PURPOSE

This service instruction provides parts and instructions to facilitate installation of forward Basket Strut for customers that have purchased: D350-607-501 Conversion Kit @ CHG 004, D350-607-511 Quick Release Basket Mounting Kit @ CHG 004, D350-607-541 @ CHG 006, D350-607-543 @ CHG 007, D350-607-545 @ CHG 006, D350-607-547 @ CHG 007 Heli-Utility-Baskets as well as the D350-607-431 Strut Retrofit Kit and the D350-607-641 Long Cargo Tube @ CHG 001.

2.0 PARTS LIST:

Modify the quantities for D3910-5 and add D3910-7 as follows:

QTY -541	QTY -543	QTY -545	QTY -547	QTY -511	QTY -501	PART NUMBER	DESCRIPTION
X						D350-607-541	HELI-UTILITY-BASKET @ CHG 007 OR LATER
	X					D350-607-543	HELI-UTILITY-BASKET @ CHG 008 OR LATER
		X				D350-607-545	HELI-UTILITY-BASKET @ CHG 007 OR LATER
			X			D350-607-547	HELI-UTILITY-BASKET @ CHG 005 OR LATER
1	1	1	1	X		D350-607-511	QUICK RELEASE BASKET MOUNTING KIT @ CHG 005 OR LATER
					X	D350-607-501	CONVERSION KIT @ CHG 005 OR LATER
				1	1	D3910-5	X-TUBE LUG
				1	1	D3910-7	X-TUBE LUG

(ADD)

QTY -413	QTY -415	QTY -417	QTY -419	QTY -431	PART NUMBER	DESCRIPTION
X					D350-607-413	HEAVY DUTY LID KIT (LONG)
	X				D350-607-415	HEAVY DUTY LID KIT (SHORT)
		X			D350-607-417	LIGHTWEIGHT LID KIT (LONG)
			X		D350-607-419	LIGHTWEIGHT LID KIT (SHORT)
				X	D350-607-431	STRUT RETROFIT KIT @ CHG 005 OR LATER
				1	D3910-5	X-TUBE LUG
				1	D3910-7	X-TUBE LUG


(ADD)

QTY -641	QTY -611	QTY -511	QTY -431	PART NUMBER	DESCRIPTION
X				D350-607-641	QUICK RELEASE LONG CARGO TUBE
1	X			D350-607-611	LONG CARGO TUBE
1		X		D350-607-511	QUICK RELEASE BASKET MOUNTING KIT @ CHG 005 OR LATER
			X	D350-607-431	STRUT RETROFIT KIT @ CHG 005 OR LATER
		1	1	D3910-5	X-TUBE LUG
		1	1	D3910-7	X-TUBE LUG

(ADD)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: 
D. SHEPHERD (DE # 02)

DATE: 14.05.16
CERT. NO.: SH94-14
ISSUE NO.: 6

A	NEW ISSUE	AJS	14.05.16
REV.	DESCRIPTION	BY	DATE
DESIGN	AJS	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	N/A	DRAWING NO.	REV. A
MFG. APPR.		DSI 9699	SHEET 1 OF 2
APPROVED		TITLE	SCALE
DE APPR.		LUG REPLACEMENT	NTS
DATE	14.05.16	COPYRIGHT © 2014 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

3.0 PROCEDURE:

Install the D350-607-501 Conversion Kit, D350-607-511 Quick Release Mounting Kit or D350-607-431 Strut retrofit kit per Installation Instructions D350-607-3 Rev. D or D350-607-4 Rev. C. While installing the Forward Strut perform the following:

- 3.1 Substitute the Forward Lower D3910-5 X-Tube Lug with the D3910-7 X-Tube Lug as shown in Figure 1.
- 3.2 Install the forward D4775-041 Strut Assembly. Transfer mark from the upper hole on the clevis of the D4775-041 Strut Assembly to the D3910-7 X-tube Lug and drill thru the lug $\varnothing 0.257$ - $\varnothing 0.261$ as shown in Figure 1. Touch up chemical conversion coating per MIL-DTL-5541. Check the witness holes located at the bottom end of the D4775-041 Strut Assemblies to ensure that the thread from the rod end extends past the witness hole.
Torque MS21042L4/-4 nuts to 50-70 in-lbs (5.7-7.9 N-m). Torque MS21042L6/-6 nuts to 160-190 in-lbs (18.1-21.5 N-m).
- 3.3 Complete the installation in accordance with Installation Instructions D350-607-3 Rev. D or D350-607-4 Rev. C.

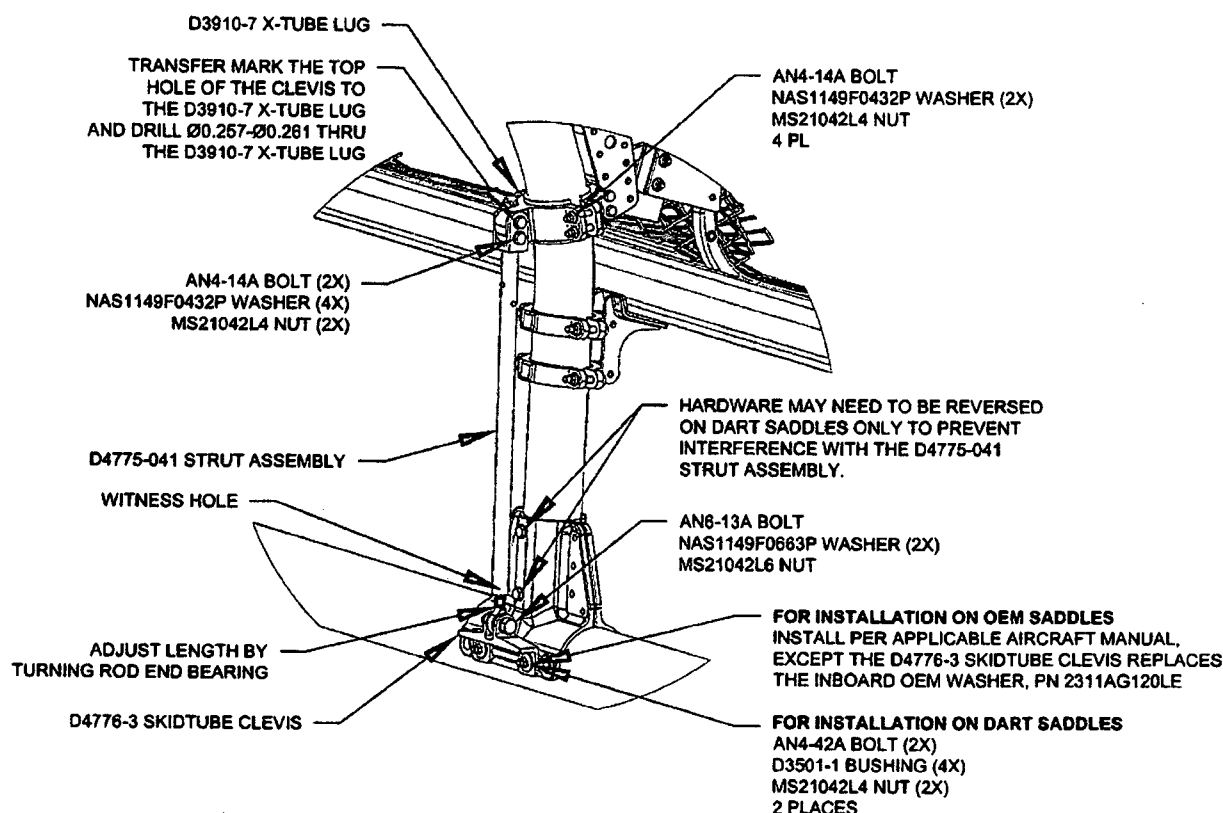


FIGURE 1: INSTALLATION OF D4775-041 FWD STRUT

4.0 WEIGHT AND BALANCE:

There is no weight and balance change associated with this update.

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: *[Signature]*
D. SHEPHERD (DE # 02)

DATE: 14.05.16
CERT. NO.: SH94-14
ISSUE NO.: 6

DESIGN	AJS	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9699	SHEET 2 OF 2
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	LUG REPLACEMENT	NTS
DATE	14.05.16	COPYRIGHT © 2014 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

5.0 PARTS LIST

QTY -641	QTY -611	QTY -511	QTY -431	PART NUMBER	DESCRIPTION
X				D350-607-641	QUICK RELEASE LONG CARGO TUBE
1	X			D350-607-611	LONG CARGO TUBE
1		X		D350-607-511	QUICK RELEASE BASKET MOUNTING KIT
			X	D350-607-431	STRUT RETROFIT KIT
		8	8	D3501-1	BUSHING
		2		D3910-3	X-TUBE LUG
		2	2	D3910-5	X-TUBE LUG
	1			D3912-041	EYEBOLT RECEIVER ASSY
	4			D3917-3	WASHER
		8	4	D3984-030	RUBBER EXTRUSION, X-TUBE
		1		D4148-041	FWD X-TUBE LUG ASSY
		1		D4149-041	AFT X-TUBE LUG ASSY
	1			D4151-043	BASKET FWD HARDPOINT ASSY (UPPER)
		2	2	D4775-041	STRUT ASSEMBLY
		2	2	D4776-3	SKIDTUBE CLEVIS
	1			D4874-041	CARGO TUBE ASSEMBLY
	1			D4875-043	CARGO TUBE AFT STRUT
	1			D4875-045	FWD ATTACHMENT CLEVIS
			1	D4917-300	PLACARD MAX LOAD
			1	D4917-310	PLACARD MAX LOAD
			1	D4917-315	PLACARD, MAX LOAD
			1	D4917-320	PLACARD, MAX LOAD
			1	D4917-332	PLACARD, MAX LOAD
	1			D5028-041	PLUG ASSEMBLY
	1			D5031-041	LOCK PIN ASSY
	2			AN310-4	CASTLE NUT
	2			AN4-11	BOLT
	4			AN4-13A	BOLT
		20	12	AN4-14A	BOLT
		4	4	AN4-42A	BOLT
		2	2	AN6-13A	BOLT
	4	24	16	MS21042L4	NUT
		2	2	MS21042L6	NUT
	2			MS24665-151	COTTER PIN
	20	40	24	NAS1149F0432P	WASHER
		4	4	NAS1149F0663P	WASHER

DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS D350-607-3 Rev.D,
INSTALLATION INSTRUCTIONS D350-607-4 Rev. C AND
INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-607 REV. 6
REF TCCA STC: SH94-14
REF FAA STC: SR00213NY
REF EASA STC: EASA.10016996
REF BRAZILIAN STC: 2007S03-03/-04/-05/-06

1.0 PURPOSE

This service instruction provides parts and instructions to facilitate installation of forward Basket Strut for customers that have purchased: D350-607-501 Conversion Kit @ CHG 004, D350-607-511 Quick Release Basket Mounting Kit @ CHG 004, D350-607-541 @ CHG 006, D350-607-543 @ CHG 007, D350-607-545 @ CHG 006, D350-607-547 @ CHG 007 Heli-Utility-Baskets as well as the D350-607-431 Strut Retrofit Kit and the D350-607-641 Long Cargo Tube @ CHG 001.

2.0 PARTS LIST:

Modify the quantities for D3910-5 and add D3910-7 as follows:

QTY -541	QTY -543	QTY -545	QTY -547	QTY -511	QTY -501	PART NUMBER	DESCRIPTION
X						D350-607-541	HELI-UTILITY-BASKET @ CHG 007 OR LATER
	X					D350-607-543	HELI-UTILITY-BASKET @ CHG 008 OR LATER
		X				D350-607-545	HELI-UTILITY-BASKET @ CHG 007 OR LATER
			X			D350-607-547	HELI-UTILITY-BASKET @ CHG 005 OR LATER
1	1	1	1	X		D350-607-511	QUICK RELEASE BASKET MOUNTING KIT @ CHG 005 OR LATER
					X	D350-607-501	CONVERSION KIT @ CHG 005 OR LATER
				1	1	D3910-5	X-TUBE LUG
				1	1	D3910-7	X-TUBE LUG

(ADD)

QTY -413	QTY -415	QTY -417	QTY -419	QTY -431	PART NUMBER	DESCRIPTION
X					D350-607-413	HEAVY DUTY LID KIT (LONG)
	X				D350-607-415	HEAVY DUTY LID KIT (SHORT)
		X			D350-607-417	LIGHTWEIGHT LID KIT (LONG)
			X		D350-607-419	LIGHTWEIGHT LID KIT (SHORT)
				X	D350-607-431	STRUT RETROFIT KIT @ CHG 005 OR LATER
				1	D3910-5	X-TUBE LUG
				1	D3910-7	X-TUBE LUG

(ADD)

QTY -641	QTY -611	QTY -511	QTY -431	PART NUMBER	DESCRIPTION
X				D350-607-641	QUICK RELEASE LONG CARGO TUBE
1	X			D350-607-611	LONG CARGO TUBE
1		X		D350-607-511	QUICK RELEASE BASKET MOUNTING KIT @ CHG 005 OR LATER
			X	D350-607-431	STRUT RETROFIT KIT @ CHG 005 OR LATER
		1	1	D3910-5	X-TUBE LUG
		1	1	D3910-7	X-TUBE LUG

(ADD)

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

APPROVED

BY: 
D. SHEPHERD (DE # 02)

DATE: 14.05.16
CERT. NO.: SH94-14
ISSUE NO.: 6

A	NEW ISSUE	AJS	14.05.16
REV.	DESCRIPTION	BY	DATE
DESIGN	AJS	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
DRAWN	AJS		
CHECKED	N/A	DRAWING NO.	REV. A
MFG. APPR.	N/A	DSI 9699	SHEET 1 OF 2
APPROVED		TITLE	SCALE
DE APPR.		LUG REPLACEMENT	NTS
DATE	14.05.16	COPYRIGHT © 2014 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	